

## IP Address | Configuration Report Page | Basic Driver

## **IP Address**







From the main menu, scroll down using the arrow buttons and select 'Administration'



 


Scroll Down and select 'Network Settings,' then select 'Embedded JetDirect Menu'





Select 'TCP/IP,' then down to 'IPv4 Settings'





Select 'Manual Settings' then 'IP Address'



The IP Address should appear. Hit the back arrow to back out without changing anything.

Print Configuration Report





From the main menu, scroll down using the arrow buttons and select 'Administration'



Select 'Reports'



Select 'Configuration Page.'