


## IP Address | Configuration Report Page | Basic Driver

## **IP Address**



At the main screen, tap the 'network' icon on the top right

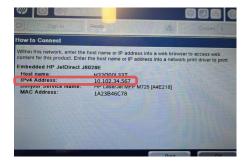

On the screen that appears, locate the 'IPv4 Address.'

## Print Configuration **Report**



At the main screen, scroll down and tap on 'Administration.'



On the 'Administration' screen. select 'Reports.'



Next, select 'Configuration Pages.'



Submitted to queue.

Next, select 'Configuration Page' and then PRINT.

